



# Irrigation Kit

## Operation and Installation Instructions

### Irrigation Accessories and Components:



Irrigation Hole Punch Tool




(2) 1/2" Hose Tee Attachments




(10) Goof Plugs



(50') 1/2" Irrigation Tubing



(40) 1/4" Barbed Coupler Fittings




(5) 1/4" Barbed Tee Fittings



1/2" Female Garden Hose Connector



(50') 1/4" Irrigation Tubing

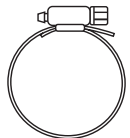

(3) 1/2" Hose Clamps



(20) Adjustable Spray Stakes

Congratulations on your new Irrigation Kit! Only water soluble fertilizers can be used through the system. Always avoid cuts, kinks, abrasions and stretching of tubes in order for your irrigation kit to work properly. Save time watering by using your kit in containers, ground plantings and raised beds. Follow these 5 simple steps in order to set up your irrigation kit. To begin, simply hook the Female Garden Hose Connector to a garden hose or spigot and turn on the water.

**Step 1:** Bend one end of the 1/2" Irrigation Tubing and clamp shut with a Hose Clamp. Tighten with a flathead screwdriver. Tubing can be cut to desired size with a pair of strong scissors or a knife.

**Step 2:** Attach Female Garden Hose Connector to the other end of the 1/2" Irrigation Tubing and connect to a garden hose.

**Step 3:** Using the Irrigation Hole Punch Tool, punch a hole where you want to add an irrigation line. Push a 1/4" Barbed Coupler Fitting into the hole until secure and attach 1/4" Irrigation Tubing that has been cut to size. Attach an Adjustable Spray Stake to the end of each hose.

**Step 4:** Push Adjustable Spray Stakes into container or bed.

**Step 5:** Repeat steps 1–4 for use in multiple areas of your garden.